



AE45 Laser Sentry Controls and Installation


External Controls and Indicators

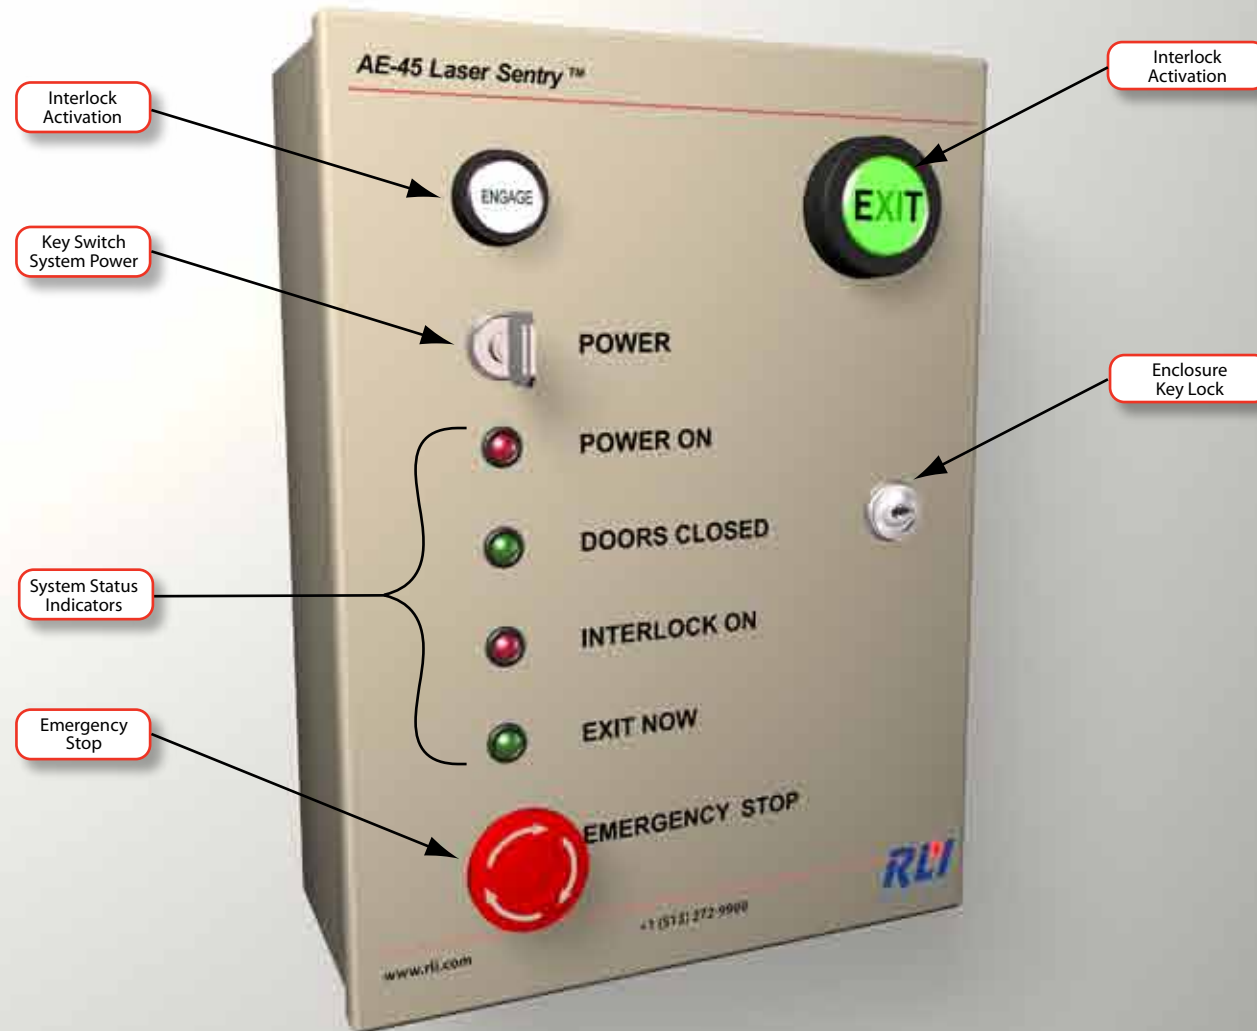


AE45 Laser Sentry Controls and Installation - Typical Use Diagram

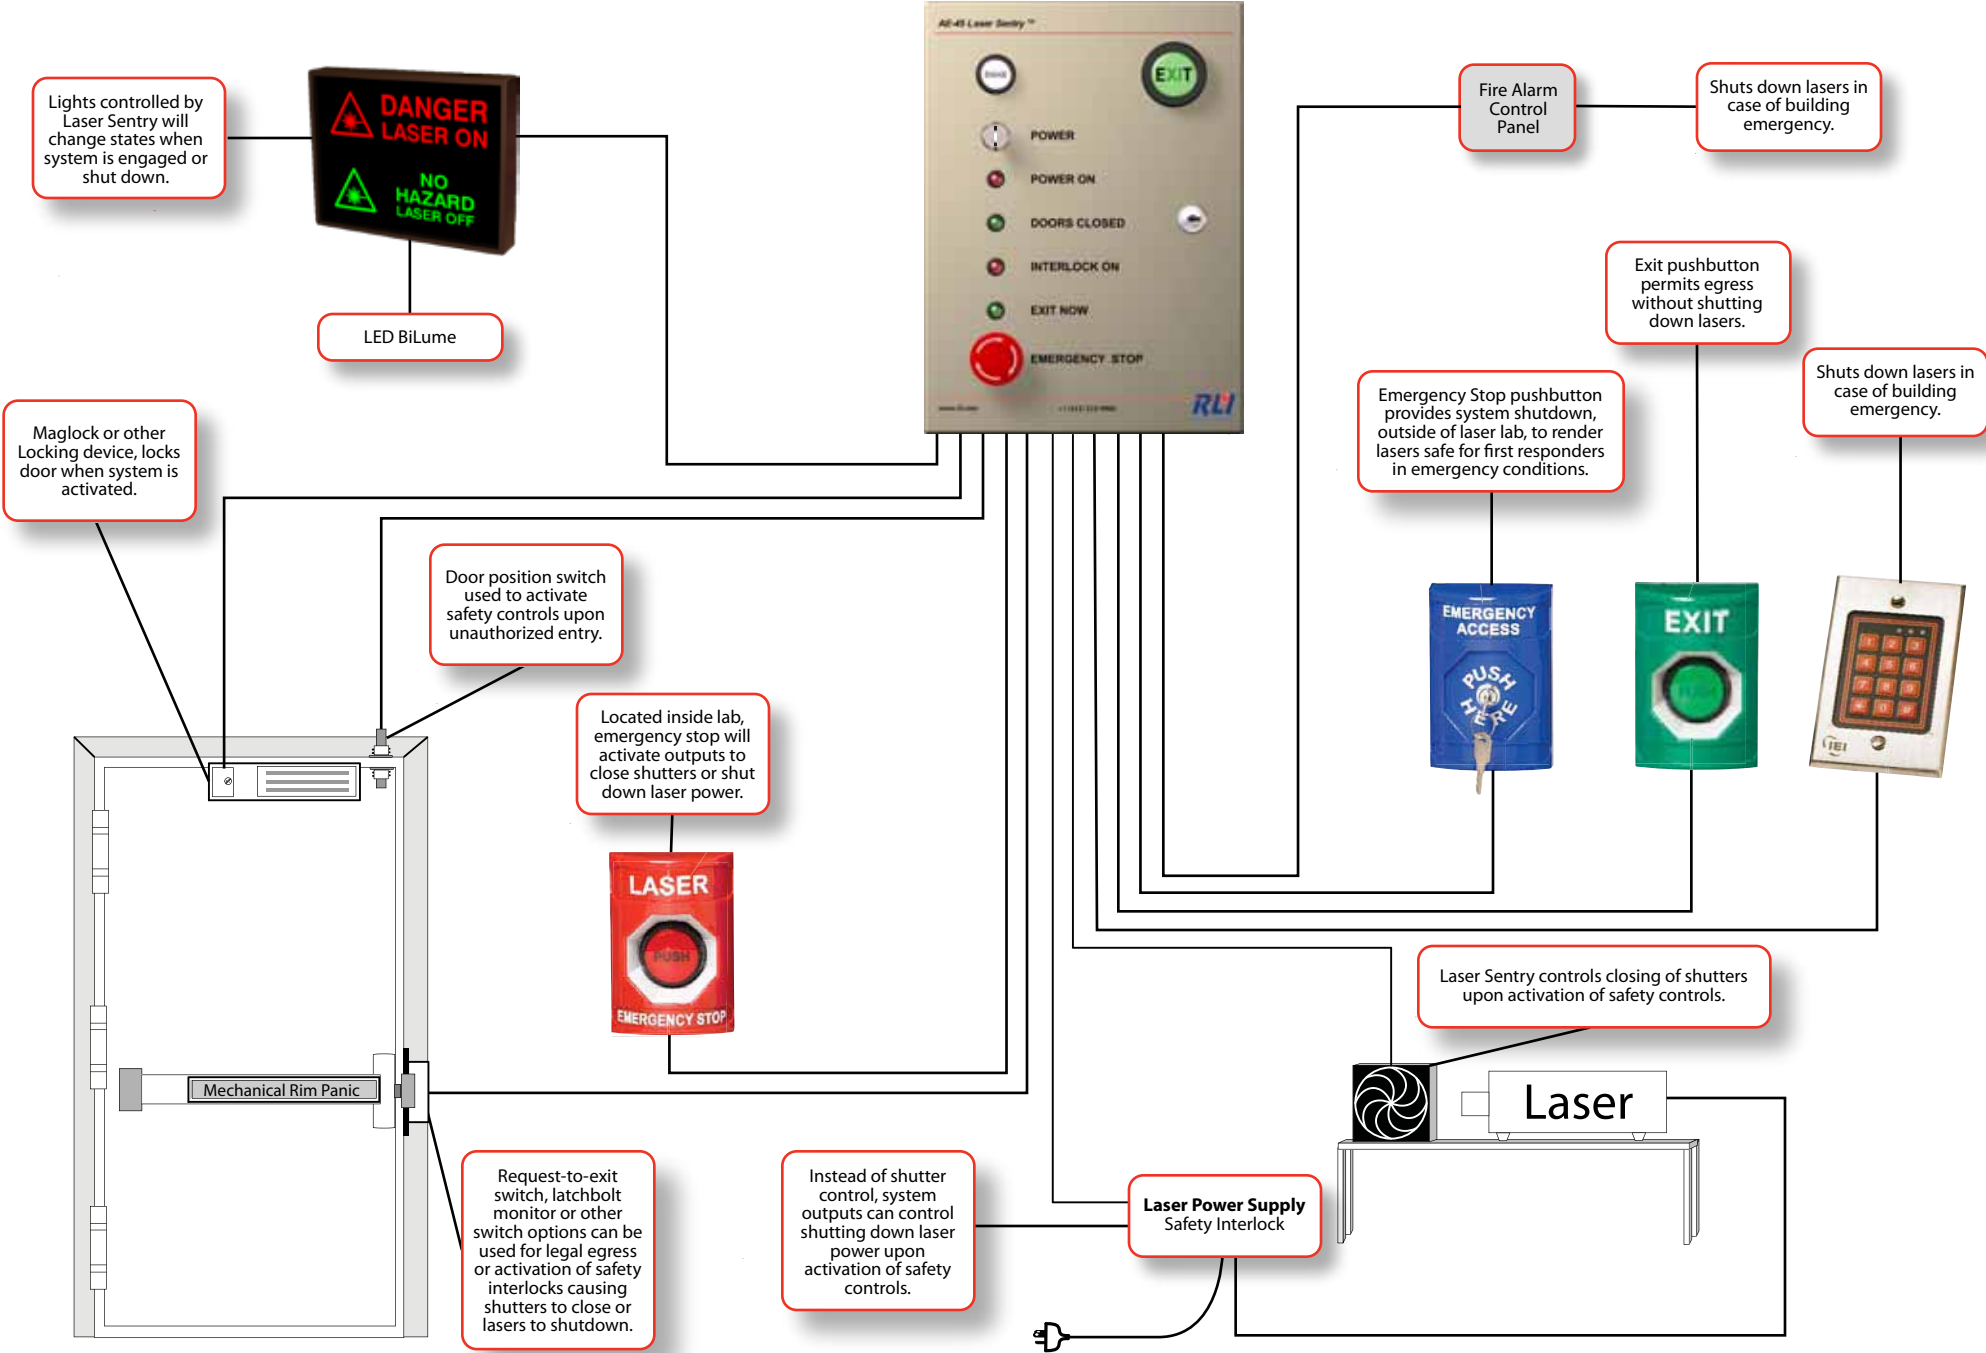


AE-45 Laser Sentry Circuit Board Layout - connections may differ from AE35 and 40 models

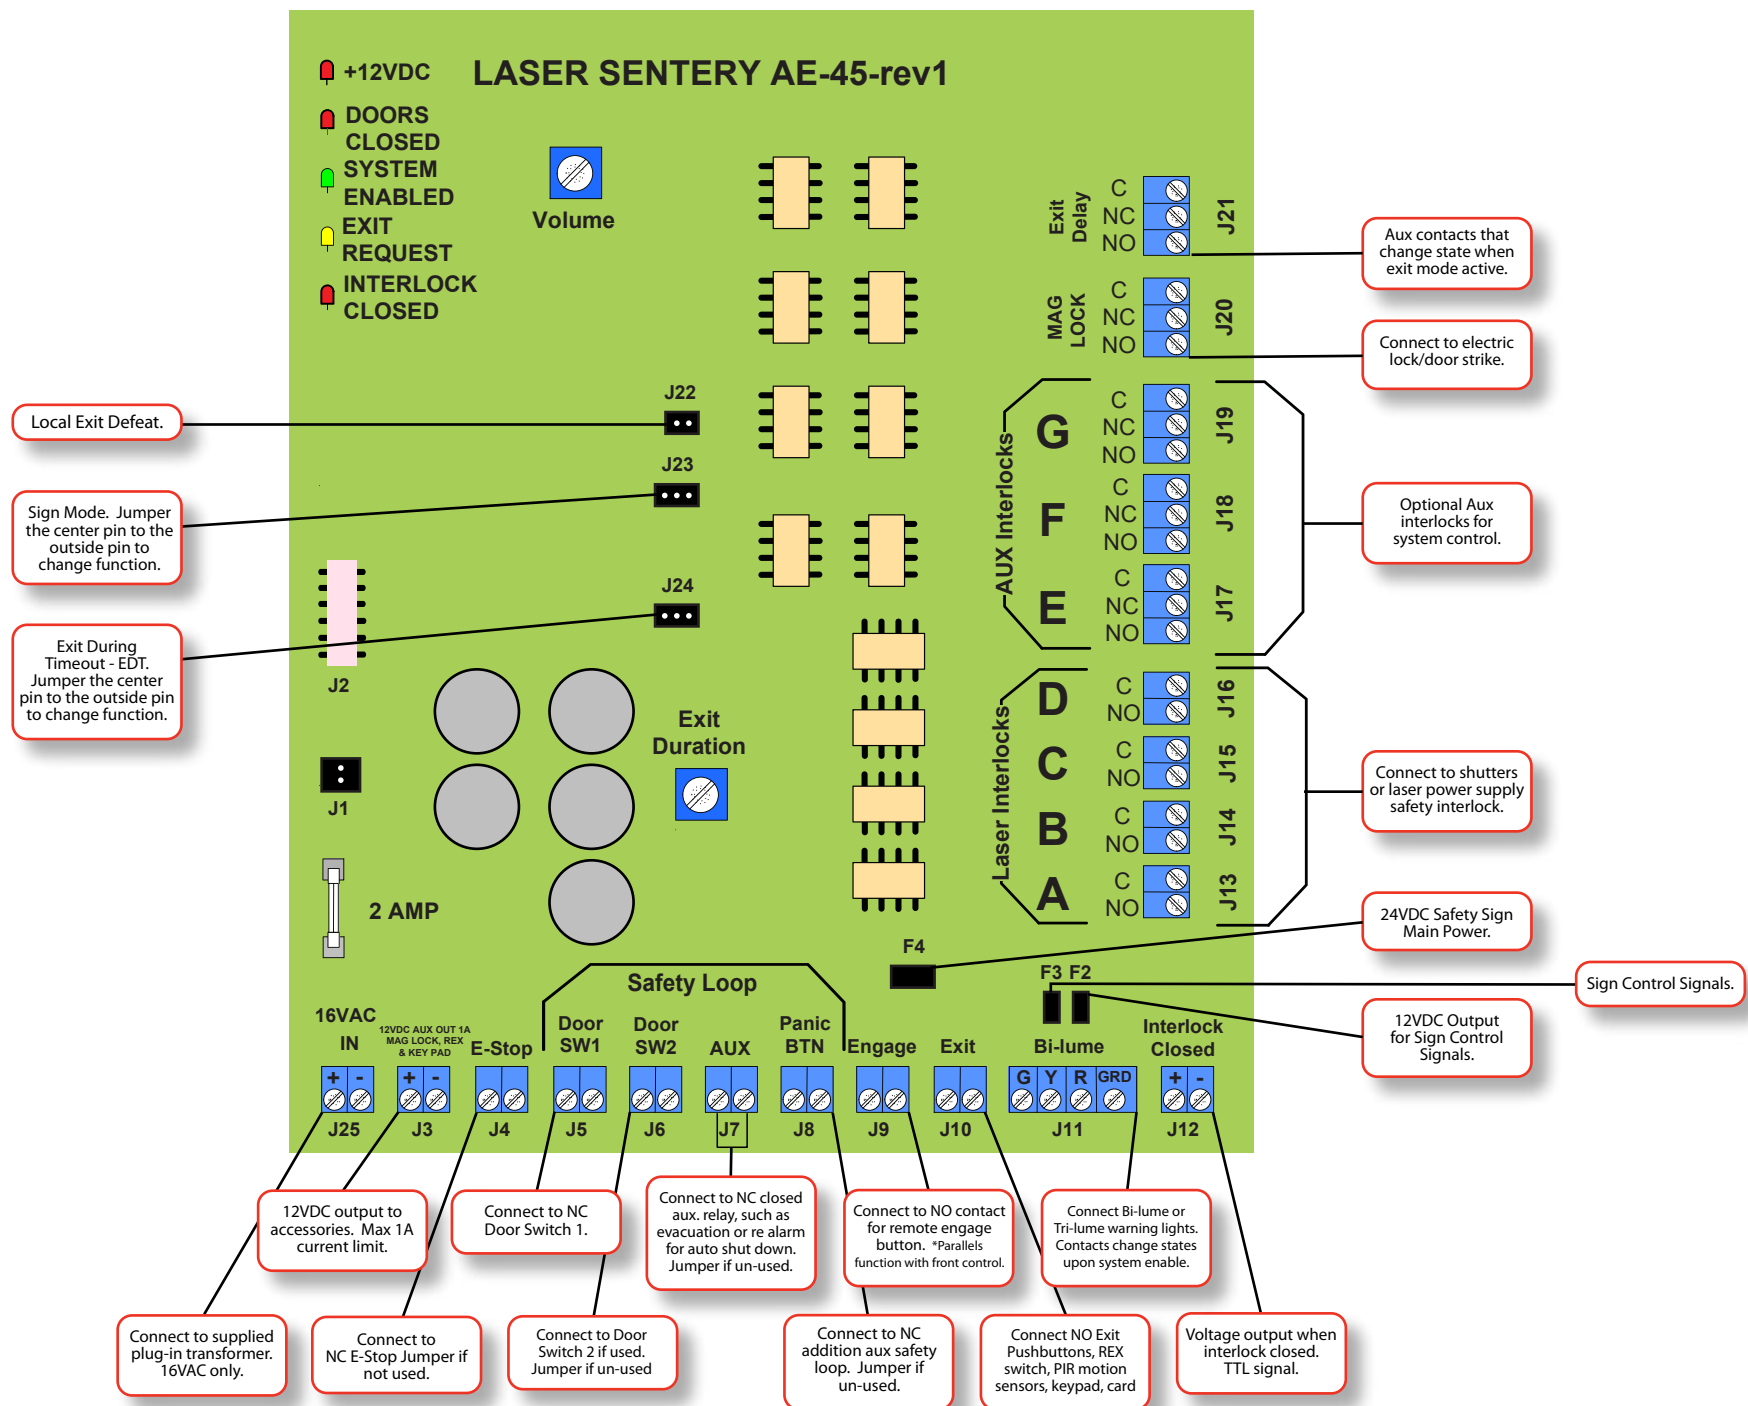

AE 45 Drawing: Sentry Point-to-Point

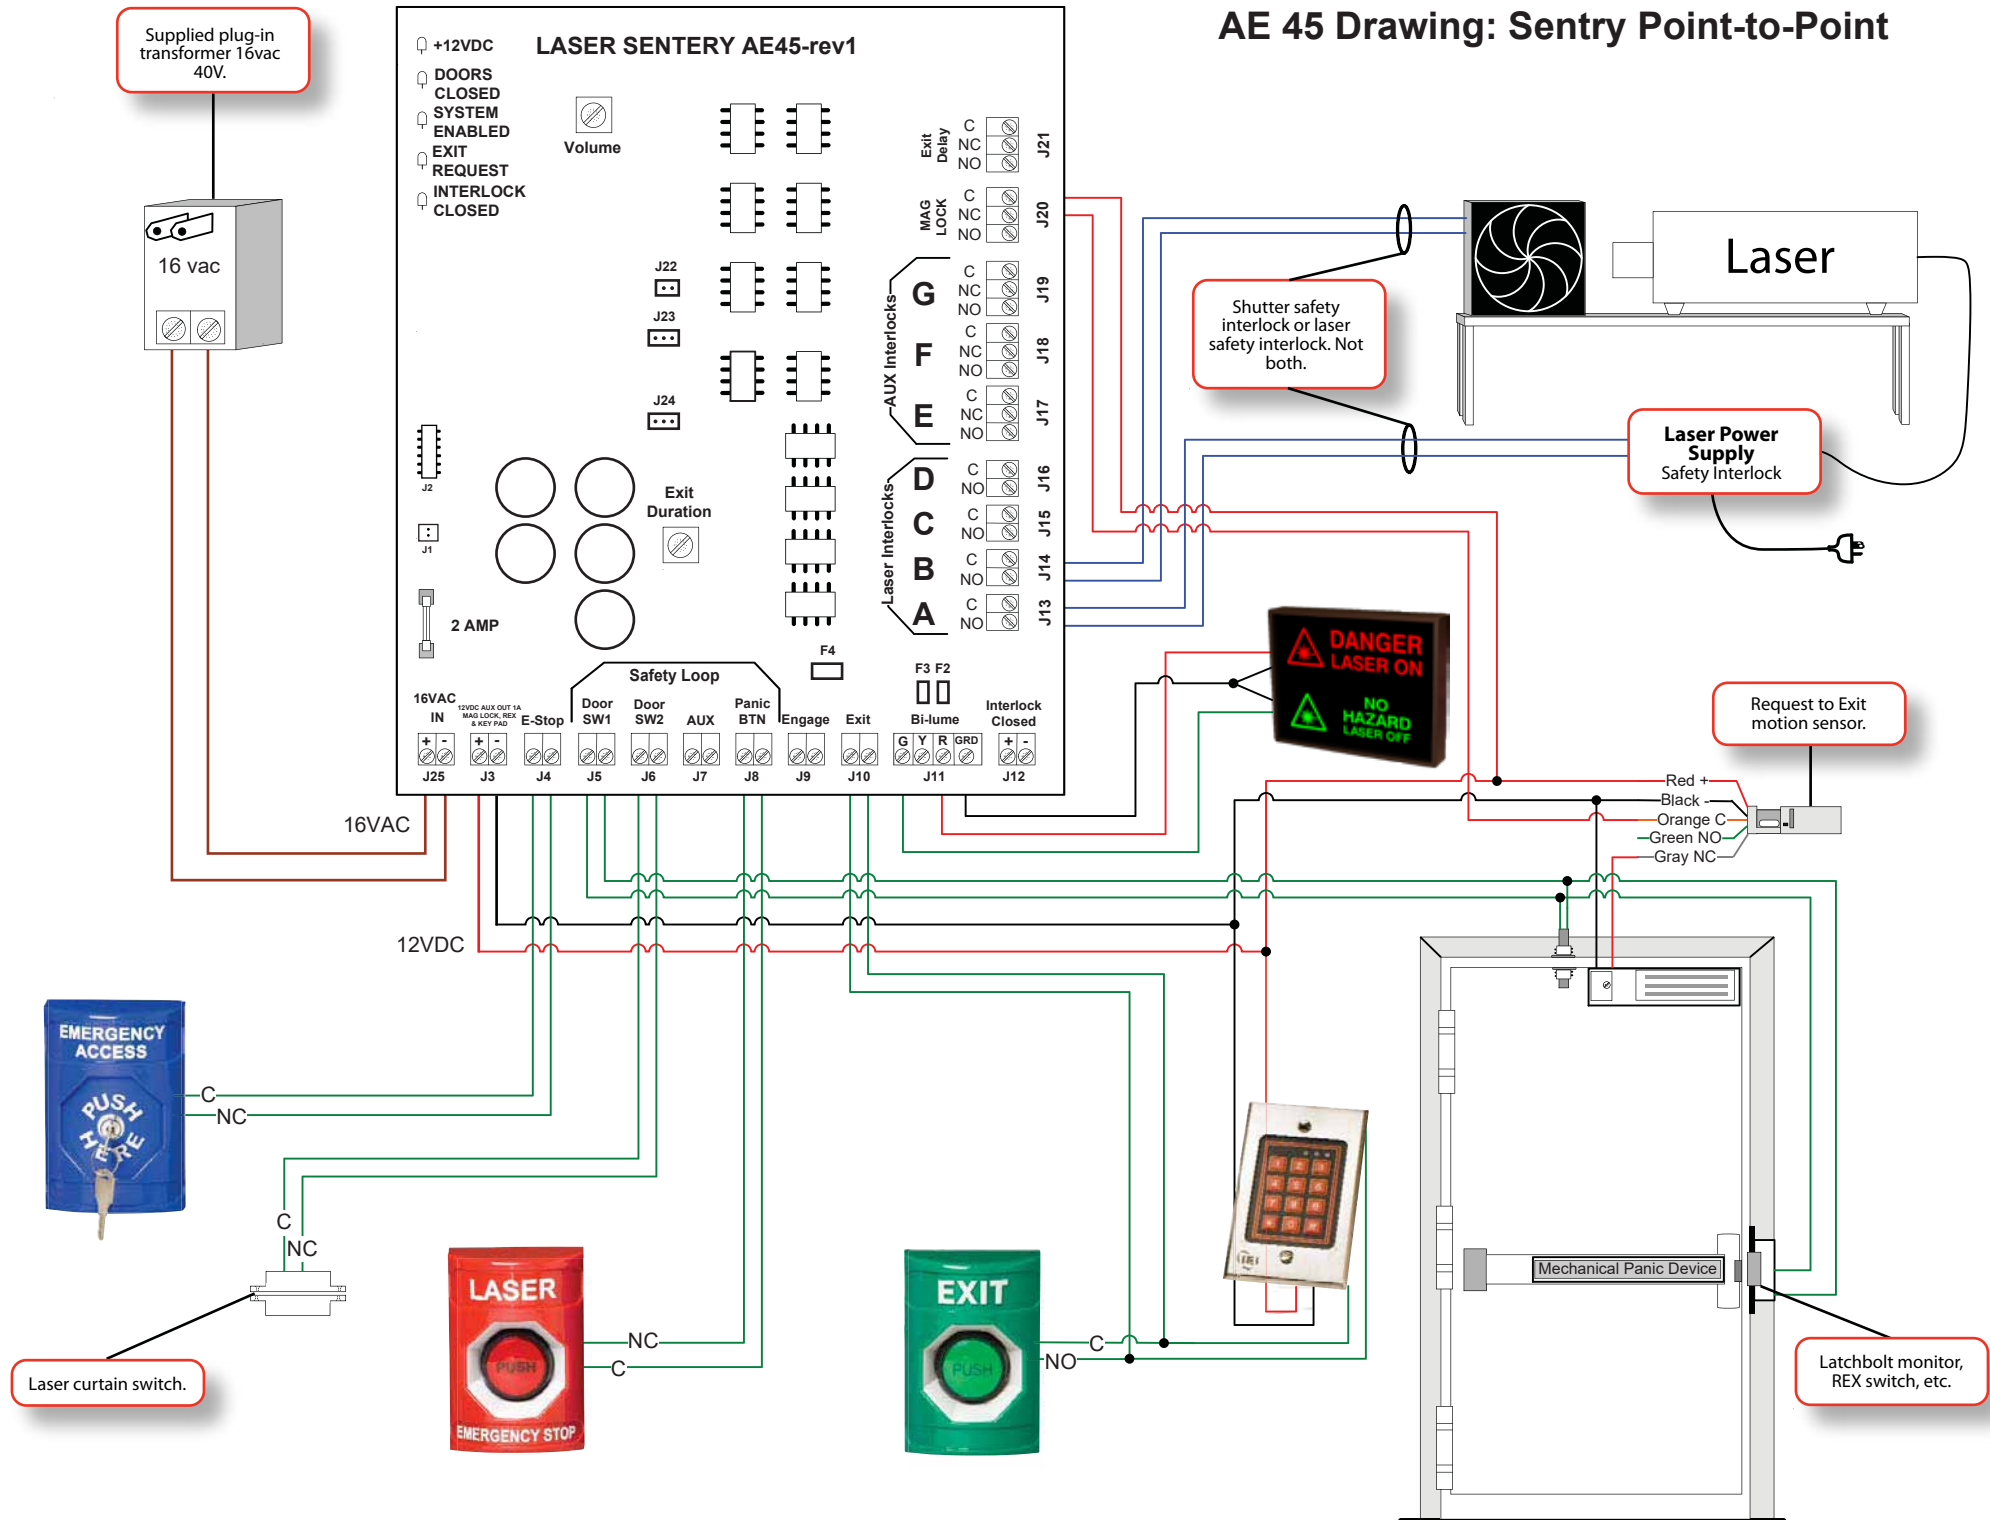

AE40-A Laser Sentry Circuit Board Layout

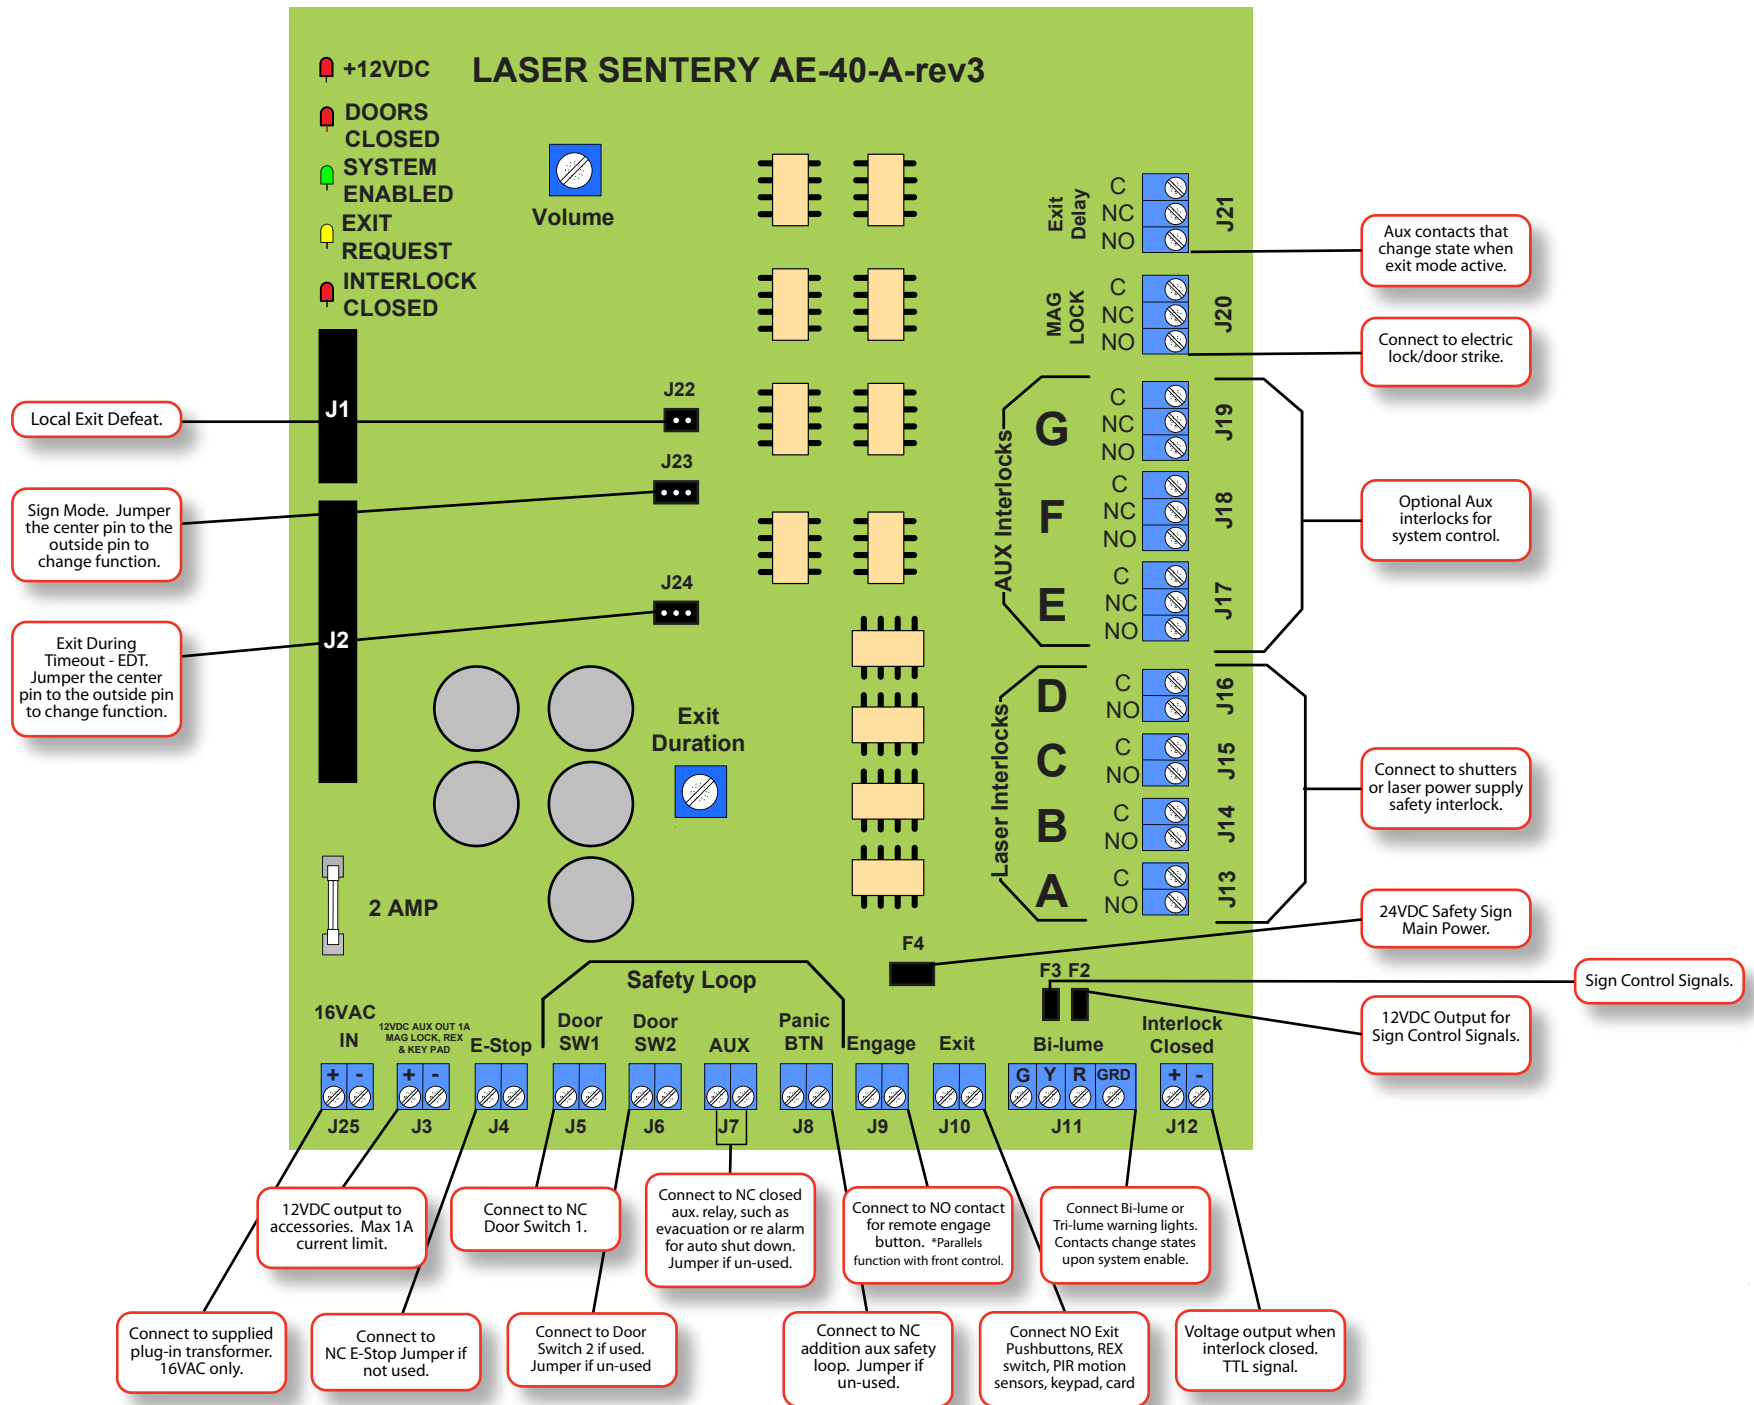

AE 40-A Drawing: Sentry Point-to-Point

